


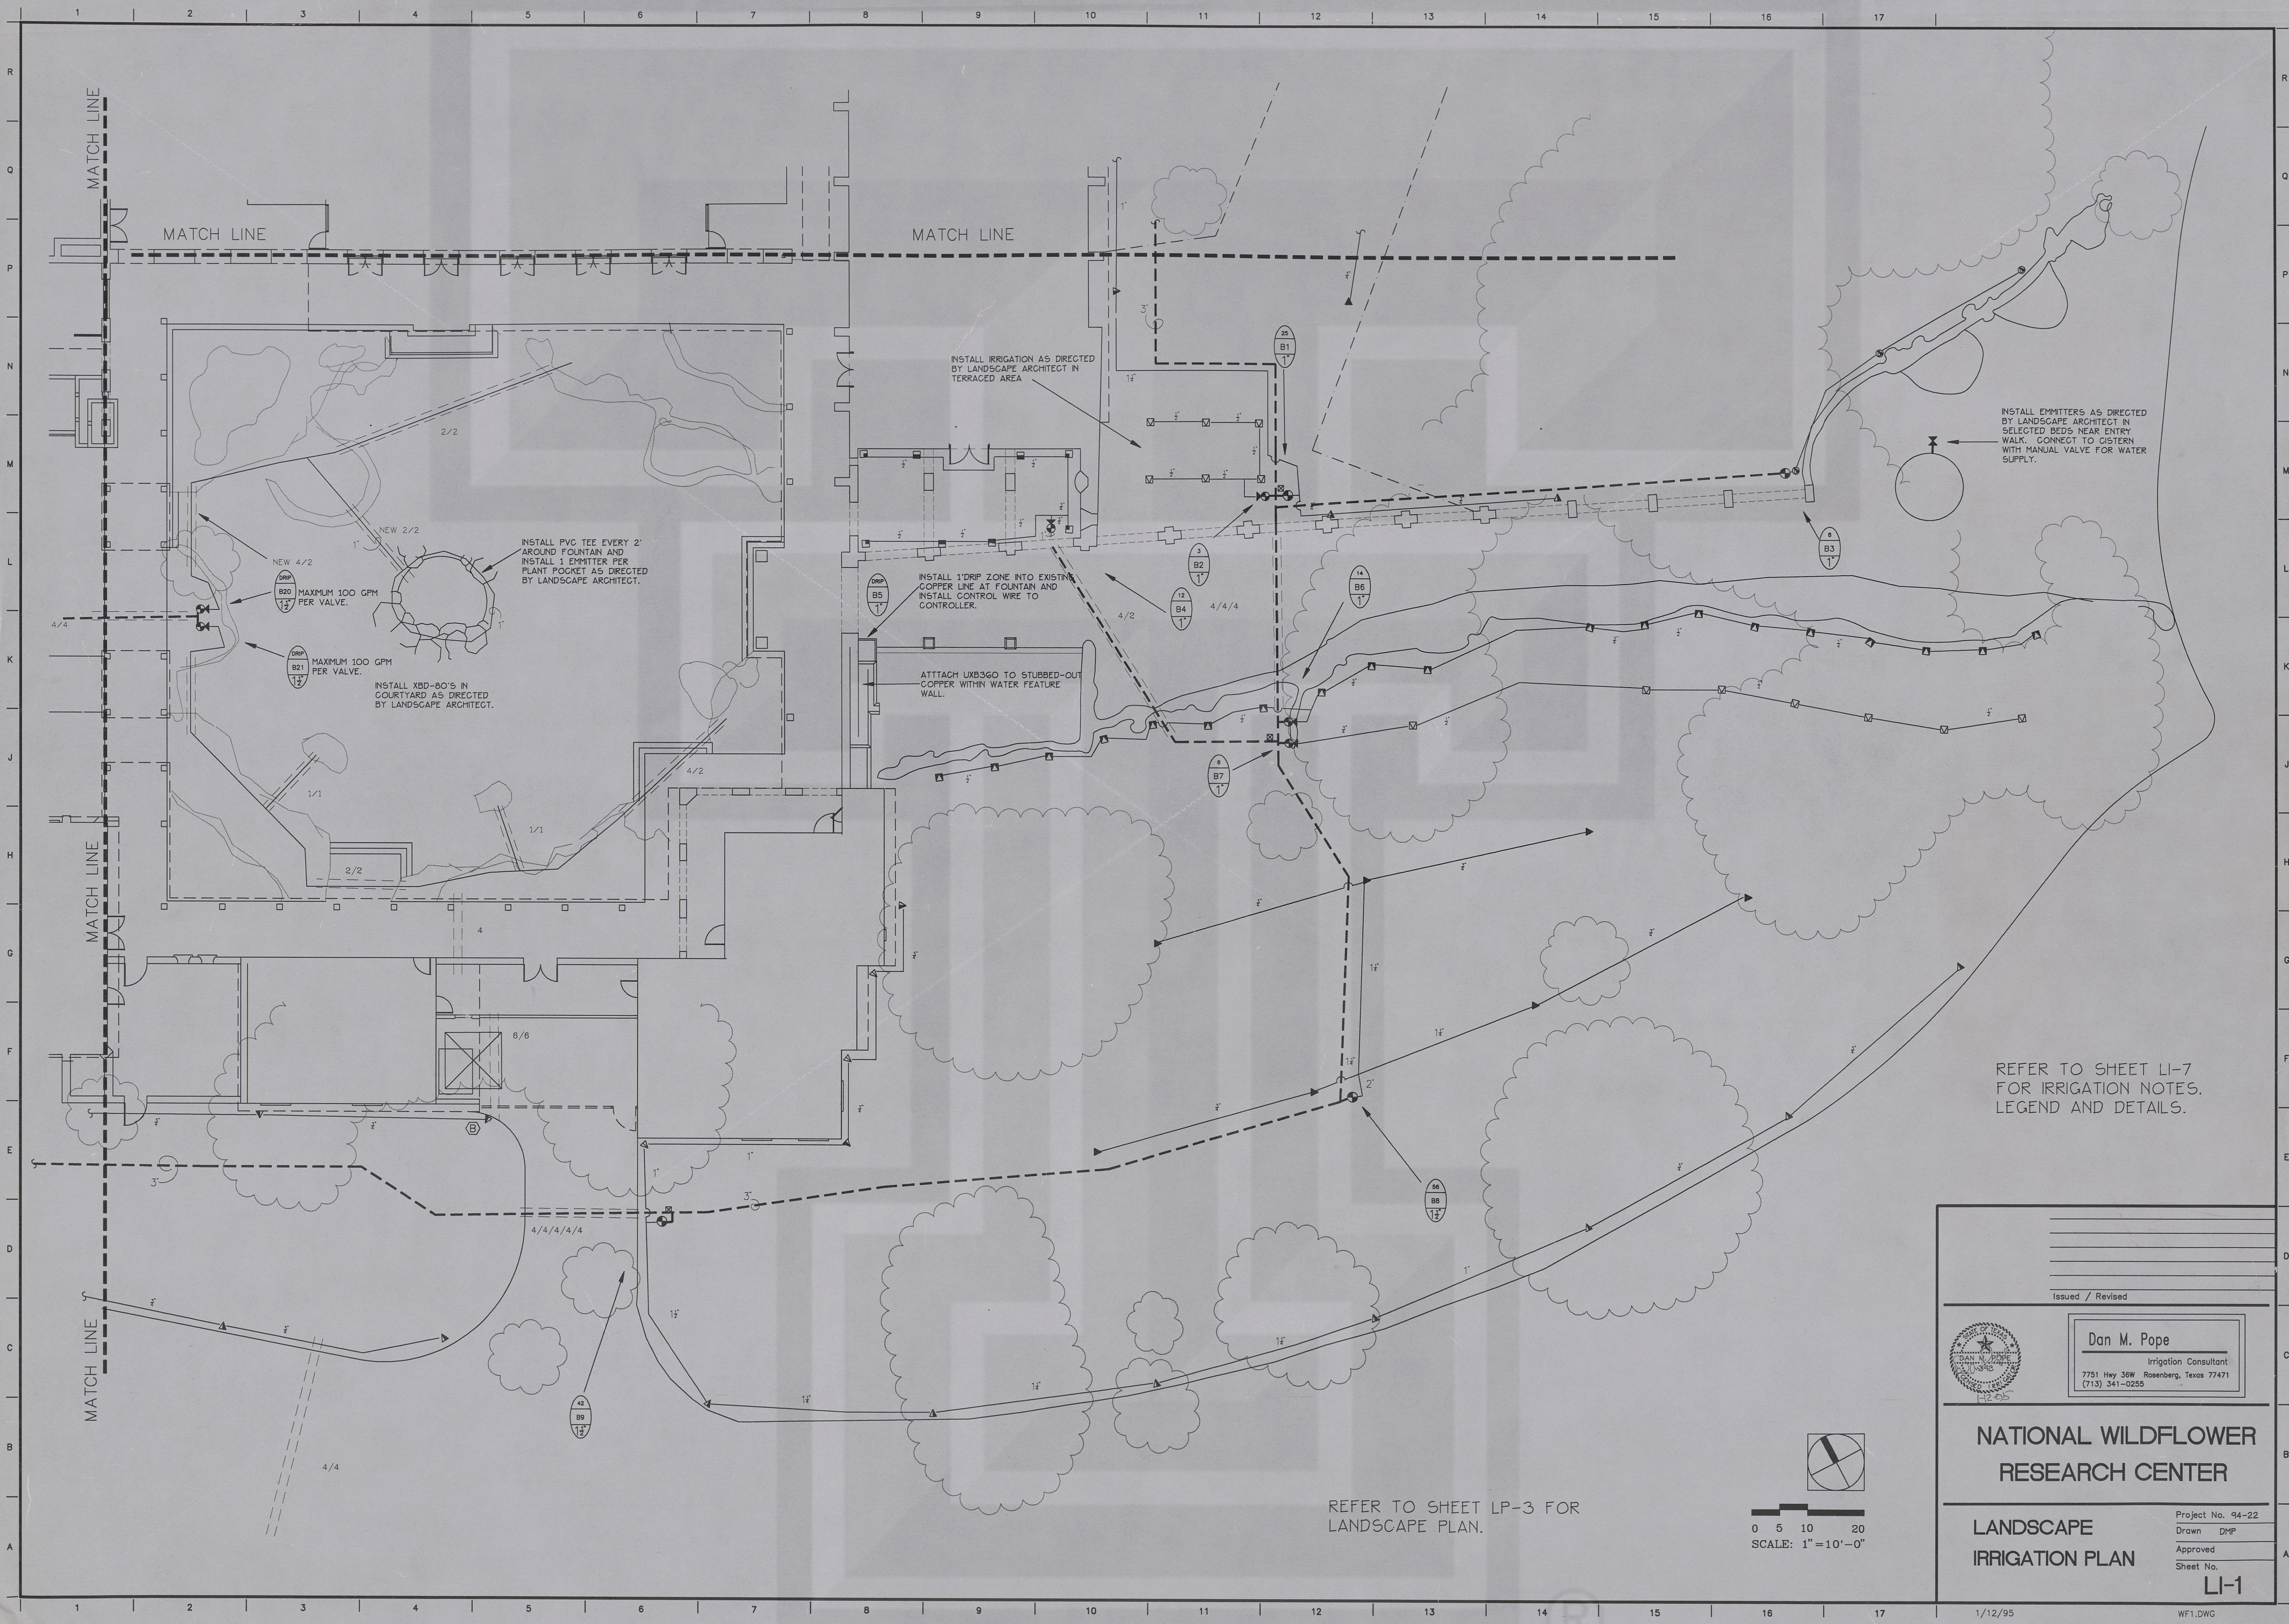

MATCH LINE

MATCH LINE

MATCH LINE

MATCH LINE

INSTALL PVC TEE EVERY 2' AROUND FOUNTAIN AND INSTALL 1 EMITTER PER PLANT POCKET AS DIRECTED BY LANDSCAPE ARCHITECT.

NEW 4/2

NEW 2/2

MAXIMUM 100 GPM PER VALVE.

INSTALL XBD-80'S IN COURTYARD AS DIRECTED BY LANDSCAPE ARCHITECT.

INSTALL IRRIGATION AS DIRECTED BY LANDSCAPE ARCHITECT IN TERRACED AREA


INSTALL 1" DRIP ZONE INTO EXISTING COPPER LINE AT FOUNTAIN AND INSTALL CONTROL WIRE TO CONTROLLER.

ATTACH UXB360 TO STUBBED-OUT COPPER WITHIN WATER FEATURE WALL.

INSTALL EMITTERS AS DIRECTED BY LANDSCAPE ARCHITECT IN SELECTED BEDS NEAR ENTRY WALK. CONNECT TO CISTERN WITH MANUAL VALVE FOR WATER SUPPLY.

REFER TO SHEET LI-7 FOR IRRIGATION NOTES, LEGEND AND DETAILS.

REFER TO SHEET LP-3 FOR LANDSCAPE PLAN.

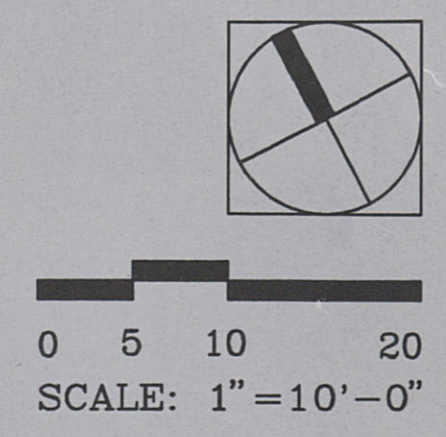

Dan M. Pope

Irrigation Consultant

7751 Hwy 36W Rosenberg, Texas 77471
(713) 341-0255

NATIONAL WILDFLOWER RESEARCH CENTER

LANDSCAPE IRRIGATION PLAN

Project No. 94-22

Drawn DMP

Approved

Sheet No.

LI-1

1/12/95

WF1.DWG

1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17

R Q P N M L K J I H G F E D C B A